





| <b>HZ 91-500</b>      |               |               |               |
|-----------------------|---------------|---------------|---------------|
| TYP/TYPE              | HZ91-50011350 | HZ91-50011800 | HZ91-50012400 |
| A                     | 1350          | 1800          | 2400          |
| B                     | 1720          | 2160          | 2760          |
| C                     | 2250          | 2710          | 3300          |
| D                     | 1330          | 1780          | 2380          |
| E                     | 1570          | 2020          | 2620          |
| F                     | 2800          | 3300          | 3600          |
| G                     | 2030          | 2255          | 2580          |
| H                     | 1175          | 1400          | 1700          |
| I                     | 960           | 1060          | 1060          |
| K                     | 3935          | 1360          | 4760          |
| L                     | 2430          | 2650          | 2980          |
| M <sub>min</sub> (kW) | 400           | 500           | 600           |
| M <sub>max</sub> (kW) | 600           | 800           | 1000          |
| N                     | 2380          | 2750          | 3280          |
| O                     | 1310          | 1540          | 1840          |
| P                     | 3340          | 3795          | 4420          |
| Q                     | 5965          | 6615          | 7340          |
| R                     | 2400          | 2600          | 2600          |
| S                     | 3000 ÷ 15000  | 3000 ÷ 15000  | 3000 ÷ 15000  |